










Feature

- Wi-Fi APP available for IOS and Android
- Touch screen manual control
- 433MHz RF remote control, can pair with all LinkAYL remote
- Can be controlled by external sensor, such as rain sensor or smoke sensor
- Can store 8 transmitter signals
- Motor protection, cutting power off automatically in 5 minutes
- Standard 86 type, easy to install
- Working temperature is-10~+65°C

Ordering code


Model	Vin	Vout	lout	Frequency	Sensitivity	Size
LK-MR521	100-240VAC	100-240VAC	0.2A	433.92MHz	-100dBm	86*86*35mm
LK-MR523	100-240VAC	24VDC	3A	433.92MHz	-100dBm	86*86*35mm

Button & terminal

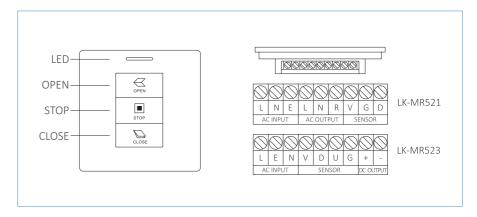

AC Input		AC Output		DC Output		Sensor	
L	Live Wire	L	Forward	+	24VDC Positive	V	12VDC+
N	Null Wire	R	Reverse	-	24VDC Negative	D	Down
Е	Earth Wire	Ν	Neutral			U	Up
						G	Com

Solution

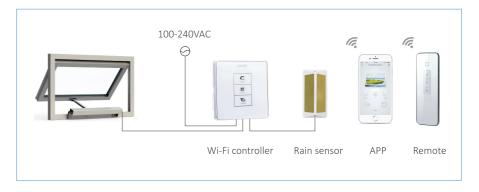



LK-MR52X Wi-Fi Actuator Controller

■ WiFi APP control

Download APP Smart Life on Google Play (Android Market) or Apple App Store



- Pair the controller with mobile phone
 - Power the controller on, please place your router, mobile phone, and controller as close as possible
 - Open APP Smart Life on your phone
 - Register an account with a mobile number, set a login password. if you have registered an account, please enter your account and password to log in directly
 - Enter the main interface of APP, click Add Device, Small Home Appliances, Door/Window
 - Click Confirm indicator rapidly blink
 - Enter Wi-Fi Password
 - Keep pressing STOP on the controller for 8 seconds, red LEDs rapidly blink
 - Click Confirm to register controller to smart cloud and initialize controller
 - Controller added successfully click Done
- Control the window via APP
 - Press Open Stop Close to control window
 - User-defined time to Open Close window
 - Third party control by Alexa, IFTTT, Tmall Genie, DuerOS, Rokid in some countries or regions
- RF remote control
- Matching code
 - Power the controller on, press STOP on the controller for 5 seconds
 - Press UP on the remote within 15 seconds
 - Codes are matched after LED flashes 3 times.
- ☐ Clearing single code
 - Power the controller on, press STOP on the controller for 5 seconds
 - Press DOWN on the remote within 15 seconds
 - Code is cleared after LED flashes 3 times

- ☐ Clearing all codes
 - Power the controller on, press STOP and CLOSE on the controller for 5 seconds
 - All the codes are deleted after LFD flashes 3 times
- Changing direction
 - Power the controller on, press OPEN and CLOSE on the controller for 5 seconds
 - Directions are changed after LED flashes 3 times
- ☐ Inching mode
 - Power the controller on, press OPEN and STOP on the controller for 5 seconds
 - Setting is ok after LED flashes 3 times
 - Repeat the action, it turns to normal mode
 - It can work continuously when pressing the OPEN or CLOSE for more than 1.5 seconds

Installation note

- Please observe the following provisions in accord with standard of effective power
- Do not use metal objects to touch or shade the receiver, avoid the interference of receiving signals
- Transmit distance: 50 meters without obstacle, 20 meters through wall
- The installation distance between the receiver and ground, between the receiver and the ceiling is more than 1.5 m, between two receivers is more than 0.2 m
- The main power supply must be cut off before installing wiring
- In order to prevent electrostatic interference, must ensure that the receiver is effectively grounded
- After the installation, ensure that the receiver and cable are not affected by tension

Troubleshooting

No.	Symptom	Solution		
1	LED flashes, receiver shut down	Check the connection of wires Check the receiver setting		
2	LED on the transmitter is off or weak	Make sure the right installation of the batter Change the battery		
3	The transmitter and the receiver work well, the motor does not work	Check the wiring of motor Make sure the motor no failure		