

LK-RT11X Remote Transmitter



LK-RT111 LK-RT112 LK-RT115 LK-RT116

Feature

- Made by low-power and high-speed CMOS technology
- Strong anti-interference ability
- Wireless signal can pass through walls, floors and doors, be transmitted farther without obstacles
- Paired with LinkAYL receiver
- Unit size: 125mm x 45mm x 11mm

Ordering code

Model	Channel	Frequency	Remote distance	Battery	Current	Sensitivity
LK-RT111	1	433.92MHz	<50m	3VCR2430	≤10mA	-100dBm
LK-RT112	2	433.92MHz	<50m	3VCR2430	≤10mA	-100dBm
LK-RT115	5	433.92MHz	<50m	3VCR2430	≤10mA	-100dBm
LK-RT116	16	433.92MHz	<50m	3VCR2430	≤10mA	-100dBm

Operation description

- Before setting multi channel transmitter, please choose the right channel which you want to program
- Setting method of multichannel remote is as same as single channel one
- It states group control that RT116 displays "CC"

Matching code

- Power the controller on, keep pressing STOP on the receiver for 5 seconds
- Press UP on the remote in 15 seconds, LED flashes 3 times and turns off
- Codes are matched successfully

Clearing single code

- Power the controller on, keep pressing STOP on the receiver for 5 seconds
- Press DOWN on the remote in 15 seconds, LED flashes 3 times and turns off
- Codes are matched successfully

Locking channel

- Only RT116 can lock the channel. It will unlock after power off or reset
- Choose the channel you need, press the key in the hole of the back of remote three times quickly, it locked. Press three times again, it will unlock

Replacing battery

- Open the back board of the transmitter and push the cover forward
- Take out the used battery and place the new one, close the back board
- Please put the used battery in the appointed place

Troubleshooting

No.	Symptom	Frequency
1	LED on the transmitter is off or weak	1. Make sure the right installation of the battery 2. Change the battery
2	The transmitter and the receiver work well, the motor does not work	1. Check the wiring of motor 2. Make sure the motor no failure