

# LK-WT21X Wall Transmitter



LK-WT211

LK-WT212

LK-WT215

## Feature

- Made by low-power and high-speed CMOS technology
- Strong anti-interference ability
- Wireless signal can pass through walls, floors and doors, be transmitted farther without obstacles
- Paired with LinkAYL receiver
- Unit size: 86 x 86 x 11mm

## Ordering code

Model	Channel	Frequency	Remote distance	Battery	Current	Sensitivity
LK-WT211	1	433.92MHz	<50m	3VCR2032	≤10mA	-100dBm
LK-WT212	2	433.92MHz	<50m	3VCR2032	≤10mA	-100dBm
LK-WT215	5	433.92MHz	<50m	3VCR2032	≤10mA	-100dBm

## Operation description

- Before setting multi channel transmitter, please choose the right channel which you want to program
- Setting method of multichannel remote is as same as single channel one

## Matching code

- Power the controller on, keep pressing STOP on the receiver for 5 seconds
- Press UP on the remote in 15 seconds, LED flashes 3 times and turns off
- Codes are matched successfully

## Clearing single code

- Power the controller on, keep pressing STOP on the controller for 5 seconds
- Press DOWN on the remote in 15 seconds, LED flashes 3 times and turns off
- Code is cleared successfully

## Replacing battery

- Open the back board of the transmitter
- Take out the used battery and place the new one
- Close the back board
- Please take the used battery in the appointed place

## Troubleshooting

No.	Symptom	Frequency
1	LED on the transmitter is off or weak	1. Make sure the right installation of the battery 2. Change the battery
2	The transmitter and the receiver work well, the motor does not work	1. Check the wiring of motor 2. Make sure the motor no failure